 
 
 
 



**DOD**

GS600 User Manual



The Unit

 1. Laser Light
2. Lens
3. Mic
4. Remote Control Receiver
5. HDMI Port
6. Format Button
7. Reset Button
8. DC Port (5V / 1A)
9. USB Port
10. Micro-SD Card Port
11. USB Switch
12. Laser Light Button
13. Blue LED Indicator
14. Red LED Indicator
15. Sound On/Off
16. File Protection Button

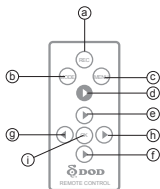

- (a) Rec Button
- (b) Mode Button
- (c) Menu Button
- (d) Playback Button
- (e) Up Button
- (f) Down Button
- (g) Left Button
- (h) Right Button
- (i) OK Button

Accessories

1. 4M Vehicle power charger
2. Bracket
3. TV Cable
4. USB Cable
5. Remote controller
6. User manual

Caution

- ⊙ Using the adaptor amperage over 5V 1A will lead to irreparable damage the device

Operation

1. Video Mode

Automatically start recording when the power supply (Red LED will flash), Automatic shut down with a custom menu delay when disconnecting the external power supply. The unit with GPS option will connect with the GPS around 3 mins outdoor. (Blue LED light will be on)

Press the remote control with "Rec Button" to stop recording (Red LED will be on instead of flash), press "Rec Button" again to continues recording (RedLED flash again). In the dark, press "Laser Light Button" to point out the position of the lens. Press "File Protection Button" or turn the unit out of horizontal position during recording , the file will be locked and won't be replaced automatically.

2. Camera Mode

Press the remote control with "Mode Button" to enter camera mode (Red LED will be on instead of flash). Press the remote control with "Rec Button" totake a picture. In the dark, press "Laser Light Button" to point out the position of the lens.

3. Playback Mode

Connect the unit and HD TV with the HDMI cable. Press the remote control with “Playback Button” from video mode to playback mode. Press the remote control with “Left / Right Button” to select the files. Press the remote control with “OK Button” to play the video file. Press “Playback Button” again to stop playing the file.

4. Menu Setting

Connect the unit and HD TV with HDMI cable. Press the remote control with “Menu Button” the menu setting diagram will be shown on the TV screen. Press the remote control with “Up / Down Button” to select the item and press “Left / Right Button” to change the value then press “OK Button” to confirm the setting. Refer to the following table for the menu list:

Video Mode

Image Param	System Setup	Language
Video resolution	Volume	English
Scene	Flicker	简体中文
Digital effect	Auto power off	繁體中文
White Balance	Time zone	한국의
ISO	TV out	日本語
EV	Stamp	русский язык
Contrast	Date & Time	
Sharpness	Format storage card	
Recycle Record	Reset	
Video flip	Version	

Camera Mode

Image Param	System Setup	Language
Photo size	Volume	English
Scene	Flicker	简体中文
Digital effect	Auto power off	繁體中文
White Balance	Time zone	한국의
ISO	TV out	日本語
EV	Stamp	русский язык
Contrast	Date & Time	
Sharpness	Format storage card	
Burst	Reset	
Self timer	Version	

Playback Mode

- Delete file
- Slideshow
- Display all files

5 Connect to PC

Connect the unit and PC with the USB cable then press“USB Switch”for 5 secs to enter the PC connection mode (Red LED and Blue LED are flash).

Click the“HD Player”file which is pre-storedn the unit to enter the PC interface, refer to the following figure for more details.

6 Format botton

Once the storage is full, and would like to delete all useless files, press this botton 5 seconds until the red and blue light flash staggered. It will format the whole storage and the device will record automatically.











7 G-Sensor Gravity-Sensor

After triggered by collision and shock, the device will record the previous, present and next video as protected status;users can also set specific videos as protected status, the protected video won't be remove by loop recording.

Software interface



Icon	Features
	Add multi files
	Remove all files on list
Recycle	Playing video repeatedly
	Home

	Backward
	Playing video
	Stop playing video
	Next file
	Forward
	End
	Take snapshot from video
	System setting : Resolution setting, Time Zone Setting, G-Sensor Sensitivity setting.
	Print file selected
	Map